MAGNATECH LED
Simply Brilliant

Recommended wiring instruction for Capricorn

1. Cable should be suitable for national regulations. Max 1.5mm^2 round max 10mm O.D.
2. Ensure all terminals are firmly tightened.
3. Ensure connector body is assembled correctly and tightened.
4. A suitably qualified electrician should be used for installation.
5. Any damage due to incorrect installation will invalidate the warranty.

Alternatively the connector may be removed and a suitable connection can be made by the customer.



Unscrew retaining ring



Pull apart



Dis-assemble



Insert wire and strip ends





Note connections



Connect cable



Tighten collar



Tighten retaining ring

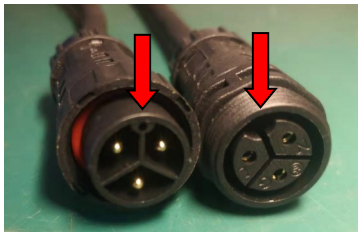

Note polarizing notch



Push together and tighten ring